



Передовой приёмник с несколькими пользователями Advanced Multiuser Receiver

ИНСТРУКЦИЯ ПО УСТАНОВКЕ И ПОЛЬЗОВАНИЮ

USE AND INSTALLATION MANUAL



Гамма: Контроль доступа / Range: Wireless Access Control Systems.

Благодарим вас за приобретения устройста ERONE

Рекомендуем внимательно прочитать инструкции до начала установки.

і] ПРЕДУПРЕЖДАЕМ

Эта инструкция по установке предназначена только для компетентного персонала, профессионально подготовленного. Установка и подключение должны быть сделаны в соответствии со всеми нормами. Не соблюдение этих правил ведёт к опасности.

Перед тем как подключить устройство убедитесь, что данные номера соответствуют данным электронной сети и что присутствует автомат защиты сети и подходяща] зашита от перенапряжения.

Подберите подходящий многополюсный выключатель с щелью минимум 3 мм.

іі] РЕКОМЕНДАЦИИ

Для установки в соответствии с нормами безопасности необходимо проверить следующие пункты:

А. соединение прибора к магнетотермической скобке должно быть сделано через кабель, снабжённый заземляющим проводом

В. Заземляющий провод должен быть соединён с терминальным блоком, закреплённым к металлическому ограждению, согласно диаграмме проводки на рис. ХХ

Диаграмма безопасной заземляющей проводки.

С.Соединение крышки металлической коробки к защите заземления должно быть сделано через проводку соединитель с плоскими контактами (смотри диаграмму соединения и разместите точку фиксации на крышке).

Соединение нижней части металлической коробки к заземляющей защите реализовано напрямую терминальным блоком. Система должна быть установлена на электрическую инсталляцию соответствующей действующей нормативе, которая должна иметь прибор для обрыва электрической сети

Е. До начала настройки проверьте электрическое соединение к земле всех частей ограждения.

F. Провод идущий от предохранителя должен быть зафиксирован

Детали, требующие внимания

А. В течении корректной работы прибора ERMU, коробка должна быть закрыта на ключ, чтобы предотвратить любой контакт с частями, находящимися под напряжением.

В. Для всех процедур обслуживания и настроек, система должна быть система должна быть выключена заранее чтобы открыть крышку

- С. Контакт с частями сети запрещен: эта опасная зона указана наклейкой как показано ниже
- D. В случае установки батареи, относитесь уважительно к рекомендациям: 12V/7Ah

Е. Соблюдайте полярность кабеля при его подсоединении к батарее



Сертификация

Этот продукт сертифицирован в соответсвии с Европейской Директивой:

-2014/53/UE: Директива "RED",

только в случае, если соблюдена инструкция, предоставленная производителем.

Возможные отличия от инструкции могут к серьёзным проблемам безопасности и работы

Передовой мультипользовательский приёмник

іі] СОДЕРЖАНИЕ

Введение	3
Моднли	4
Системные принадлежности	5
Технические характеристики	7
Монтажный набор	7
Главные черты	8
Инструкции монтажа	8
Проводка	9
Расположение	10
Карта соединений	11
Кнопки запуска и дисплей	12
Главное меню	13
Меню настройки	14
Инфо	14
Добавить (передатчик/тег)	15
Удалить (передатчик/тег/память)	16
Изменить пользователя (передатчик/тег)	17
Копировать память (бекап/восстановить)	18
Копировать на принтер	20
Настройки	22
Параметры	23
Часовые пояса	24
Владелец	25
Настройки модема	26
Соединение WIFI	30
Примечания	31
Гарантия	31

1] ВВЕДЕНИЕ

ERMU инновационный мультипользовательский приёмник с двойной технологией ID (RF и wiegand). Подходит для управления общих входов, таких как парковки, гаражи, многоквартирные дома, используя дистанционный контроль или пассивную карту. Дистанционное управление базы данных, используя GSM или PSTN кату модема (на выбор).

ERMU Передовой мультипользовательский приёмник

2] МОДЕЛИ

P/N	Код Luxor	Описание
SEL2641R433-EP100	F0114000008	CENTRALE RADIO ERMU 433 MHz 16-24 Vac/dc Plastic box
SEL2641R433-EP101	F0114000009	CENTRALE RADIO ERMU 433 MHz 16-24 Vac/dc Plastic box + MODEM PSTN
SEL2641R433-EP102	F0114000010	CENTRALE RADIO ERMU 433 MHz 16-24 Vac/dc Plastic box + MODEM GSM
SEL2641R433-EP103	F0114000013	CENTRALE RADIO ERMU 433 MHz 16-24 Vac/dc Plastic box + Module WIFI
SEL2641R433-EM100	F0114000001	CENTRALE RADIO ERMU 433 MHz 16-24 Vac/dc Metal Box
SEL2641R433-EM10G	F0114000002	CENTRALE RADIO ERMU 433 MHz 16-24 Vac/dc Metal Box + MODEM GSM
SEL2641R433-EM10P	F0114000003	CENTRALE RADIO ERMU 433 MHz 16-24 Vac/dc Metal Box + MODEM PSTN
SEL2641R433-EM200	F0114000004	CENTRALE RADIO ERMU 433 MHz 230V Metal Box
SEL2641R433-EM20G	F0114000005	CENTRALE RADIO ERMU 433 MHz 230V Metal Box- MODEM GSM
SEL2641R433-EM20P	F0114000011	CENTRALE RADIO ERMU 433 MHz 230V Metal Box- MODEM PSTN
SEL2641R433-EM210	F0114000012	CENTRALE RADIO ERMU 433 MHz 230V Metal Box + BAT 7Ah
SEL2641R433-EM21P	F0114000006	CENTRALE RADIO ERMU 433 MHz 230V Metal Box + MODEM PSTN + BAT 7Ah
SEL2641R433-EM21G	F0114000007	CENTRALE RADIO ERMU 433 MHz 230V Metal Box + MODEM GSM + BAT 7Ah

ПРИМЕЧАНИЕ:

Модели SEL2641R433-Epx с пластиковым контейнером и SEL2641R433-EM10x с металлическим контейнером, должны заряжаться от внешнего источника трансформатора в 40 BA, главным 230Vac/50 Hz и вторичным 16 Vac с двойной изоляцией или с источником питания от 16 до 24 Vac/dc. Подобный трансформатор должен быть LPS (Источник лимитированной мощности).

4

Передовой мультипользовательский приёмник

3] АКСЕССУАРЫ СИСТЕМЫ

Ø	S 3		3333
ТХ Мастер	ТХ Пользователь 024 A	TX Пользователь ER	ТХ Пользователь Mini
			-
Антенна GSM	Модем PSTN	Память бекапа старая	Кабель прибора USB
Ò		No.	
Провод пр. ТХ	Батарея 124 V 7Ah	Антенна 433 MHz	Модем GSM
WiFi модуль			

ERMU Передовой мультипользовательский приёмник

P/N	Код Luxor	Описание
S2TR2641E2M	F0204000032	ТХ МАСТЕР
S2TR2641E2	F0204000017	TX 024A 2CH
S2TR2641E4	F0204000018	TX 024A 4CH
S7TR2641E4	F0104000030-A	TX ER 4CH
SETR2641AM1B	F0103000067	TX MINI 2 CH BLU
SEAGSM	F1014000007	AHTEHHA GSM
MD-PTN	F1014000009	MODEM PSTN
SEL-2641MEMB	F0204000034	ПЯМЯТЬ СТАРГО БЕКАПА
AC-CUSA/B	F1014000011	КАБЕЛЬ USB ДЕВАЙСА
SEL2641-CPT02	F1014000012	ПРОВОД ПР. ТХ
SEA433	F0103000029	AHTEHHA 433 MHZ
MD-GSM	F1014000008	МОДЕМ GSM
MD-WIFI	tbd	WIFI ACCESS POINT - LAN I/F
CE-35ACCBT12V7A		БАТАРЕЯ 12V 7VA
CAETHRA	F0111000014	KOHBEPTEP RS232-TCP/IP

RU

Передовой мультипользовательский приёмник

4] ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

- Радиоприёмник 433,92 MHz в AM/ASK;
- Codifica Keeloq® Hopping code;
- 2 входа для считывателей 26 бит ;
- 4 выхода реле 24VA с 2 выходами (C-NA) + 2 выхода (C-NA-NC);
- 2 входа для кнопок выхода (C-NA);
- Вход USB Прибор per collegamento a PC;
- Соединитель для модема GSM с внешней антенной или модемом PSTN
- Соединитель для модуля MD-WIFI (Wifi-LAN);
- Интерфейс RS485 для соединения в сети;
- 64 устройства соединяемых в multidrop;
- Память пользователей / событие настраеваемое при первом включении (см. таблицу);
- N° тах пользователей : 4158 (с 300 событиями)
- N° max событий : 5455 (с 100 пользователями)
- Вход по кабелю репрограммирование передатчиков с соединителем RJ11;
- Соединитель для расширения памяти [6 x 512 K];
- Соединитель для памяти бекап предыдущих версий мультипользовательского приёмника;
- Соединитель для памяти бекап [4 x 512 K];
- Соединитель для устройства обновления firmware;
- Real Time Clock с батареей бекапа CR2032;
- Питание 230 Vac или 24 Vac/dc с батареей бекап 12V / 7Ah;
- Вход для соединения с батареей бекап 12V / 7 Ah с встроенной зарядкой.
- Выход 5Vdc 150 mA.
- Web-Server включён с программой управления через WEB если использован модуль WIFI

5] КИТ ПО УСТАНОВКЕ

	A			Community
	Закрытие на ключ	Предохранитель T3, 15A, 250 V	Предохранитель T1, 250 V	Винты + Пробки
ERMU	1	1	1	4

ИНСТРУКЦИЯ ПО УСТАНВОКЕ Е

ERMU Передовой мультипользовательский приёмник

6] ГЛАВНЫЕ ХАРАКТЕРИСТИКИ

- Рабочий режим Stand-alone/сеть/модем
- Управление пользоватеьской базой даных (мемо, удалить, множественное запоминание, включить/выключить)
- Детальная польщовательская информация базы данных
- Рабочий режим реле (моментальный, пошаговый, с задержанием)
- Управление часовым поясом
- Регистрация мероприятий
- Против обратной связи
- Antipassback (только для wiegand)
- Детальные настройки для многоточечной 485 сети
- Детальные настройки для модема GSM, модем PSTN звонки
- Пароли сайта
- Пароль соединения ПК
- 2 уровня безопасности (конфигуратор, пользовательское управление)
- ПО для управления сайтом для Windows (XP, Vista, Windows 7)
- Пользовательское управление в stand-alone с локальной клавиатурой или мастер передатчиком

Установите элементы закрытия для завершения монтажа ERMU металлического закрытия. Закрепите коробку вертикально, используя отверстия, находящиеся на нижней части.



Для установки запасной батареи (стр. 4) разместите батарею вертикально, в правой части коробки.

Затем поместите соединитель на контакты батареи, соблюдая правильную полярность и подключив их к главному питанию в терминальном блоке 10. (см. стр. 9)

7] ИНСТРУКЦИЯ ПО МОНТАЖУ

8

Передовой мультипользовательский приёмник

8] ПОДКЛЮЧЕНИЯ (металлическая коробка)



RU

Передовой мультипользовательский приёмник

9] РАСПОЛОЖЕНИЕ (пр. с модулем PSTN)



- 1 Соединитель для памяти бекап
- 2 Вход для антенны 433 MHz
- 3 Карта RF
- 4 Карта модем PSTN (opzionale)
- 5 Батарея CR2032 3V
- 6 Соединитель RJ45 для телефонной линии
- 7 Вход 16/24 Vac/dc
- 8 Кнопки управления(A,B,C,D)
- 9 Led активации реле
- 10 Вход для батареи 12V
- 11 Выход C-NA-NC реле RL4
- 12 Выход C-NA-NC реле RL3
- 13 Выход C-NA-NC реле RL2

- 14 Выход C-NA-NC реле RL1
- 15 Вход NA-C-NA для кнопки выхода PB1 и PB2

RU

- 16 Гудок
- 17 Вход wiegand 1
- 18 Вход wiegand 2
- 19 I/F RS-485
- 20 Перемычка для завершения 485 --> 10.2
- 21 Соединитель для бекапа памяти (старый тип)
- 22 Соединитель RJ11 для кабеля программ. TX
- 23 Led сигнала USB
- 24 Соединитель USB Device
- 25 Led Питания
- 26 Выход 5Vdc 150 mA

10 www.erone.com www.cdvigroup.com

Передовой мультипользовательский приёмник

10] РАСПОЛОЖЕНИЕ СОЕДИНЕНИЯ ЭЛЕКТРОННАЯ КАРТА



10.2] ЛИНЕЙНОЕ ОКОНЕЧНОЕ УСТРОЙСТВО RS-485

В RS-485 сети установите перемычку окончания CLOSED в ERMU в конце линии и OPEN в промежуточном ERMU.



ЕRMU В КОНЦЕ ЛИНИИ: ПЕРЕМЫЧКА ЗАКРЫТА ЕRMU ПРОМЕЖУТОЧНЫЙ: ПЕРЕМЫЧКА ОТКРЫТА

www.erone.com www.cdvigroup.com | 11



ИНСТРУКЦИЯ ПО УСТАНВОКЕ

ERMU

Передовой мультипользовательский приёмник

11а] КНОПКА ЗАПУСКА И ДИСПЛЕЙ



А= Листать меню В= Подтвердить

С= Изменить вид (H, F, D)

(Facility+decimal / Hex / Facility+S/N,)

D= A+B=Вход в главное меню/опция выход

Кнопки пуска А и В имеют функцию ключей радиоуправления MASTER

2 разных уровня доступа к меню:

А= МЕНЮ НАСТРОЙКИ В= МЕНЮ ВЛАДЕЛЬЦА

с двумя разными паролями

Пароль по умолчанию 11111 для обоих уровней.

Пароль настройки используется для доступа к установке, настроек параметров и опций обслуживания Пароль владельца открывают доступ к памяти журнала и другим опциям (дата/настройка времени). Нажимая А+В одновременно отражается тип выбранного меню и затем напрашивается соответсвующий пароль. Доступ к главному меню с передатчиком Master типа S2TR2641E2M, нажимая последовательно кнопки А+В или путём нажатия А+В на главной панели или через кнопку D.

Проистайте лпции меню используя кнопку А (ЛЕВАЯ) на передатчике Master или кнопку А на панели. Сделайте выбор с помощью кнопки В (правая) на передатчике или кнопкой В на панели.

Вернитесь в верхнее меню, нажатием одновременно кнопки А+В или кнопку D на панели.

Кнопка А может быть использована, чтобы увеличить цифры при настройке номера (например, пароля) или свернуть опции параметра.

Кнопка В используется, чтобы подтвердить выбор и перейти к следующему номеру/параметру.

Кнопка В используется для подтверждения выбора и для перехода на следующий номер/параметр.

11b] ПЕРВОЕ ВКЛЮЧЕНИЕ

При первом включении приёмник разрешает настроить структуру памяти, разделённую на Пользовательскую зону и зону Событий. Разделение по умолчанию: 3956 Пользовательская и 556 События.

UTENTI 03956 XXXXX EVENTI 00556

Изменяя номер пользователей, система автоматически считает номер разрешённых мероприятий.



Δ



Передовой мультипользовательский приёмник

11с] ВИЗУАЛИЗАЦИЯ: Символы

Нажмите несколько раз кнопку C, чтобы изменить визуализацию Серийного номера (SN) и Facility Code (FC) для удалённого контроля и серийный номер для тега wiegand.

СИМВОЛ	ПЕРЕДАТЧИК RF	TAG WIEGAND
-	SN=10406 FC=001	WG2 = 10750328
h	SN=000128A6	WG2 = 00A4096E
f	SN=001 10406	WG2=164 02414
d	SN=00075942	WG2=10750318

11d] НАСТРОЙКА ЧАСОВ : Войдите в меню Владелец.

ERMU	HH:MM:SS
D	D/MM/YYYY

ВНИМАНИЕ: Необходимо изменить вручную или через компьютер внутренние часы, когда происходит изменение ЗИМНЕЕ/ЛЕТНЕЕ время.

11е] ПАМЯТЬ МАСТЕР ТХ

Вы можете войти в главное меню только используя передатчик Master, который уже находится в памяти. В ином случае, нажмите одновременно кнопки A+B на передатчике Master. На дисплее появится следующее сообщение:



нажмите кнопку В для подтверждения

12] MEHЮ

нажатием кнопку D на панели (или одновременно A+B на сохранённом передатчике Master) можете войти в главное меню



Передовой мультипользовательский приёмник

13] МЕНЮ НАСТРОЙКИ

Выбирая опцию А меню открытия, вам понадобится ввести пароль. Введите пароль, используя кнопки А и В на панели или на передатчике Master. Ключ А увеличивает номер цифр, ключ В перемещает курсор влево.





13.1] ИНФО МЕНЮ

Пример:

Free Memory 3950 User Stored 0002 В этом примере имеются 390 ячеек памяти и было сохранено 2 пользователя

RU

Передовой мультипользовательский приёмник

13.2] МЕНЮ ДОБАВИТЬ



Передовой мультипользовательский приёмник

13.3] МЕНЮ УДАЛИТЬ



Передовой мультипользовательский приёмник

13.4] МЕНЮ ИЗМЕНИТЬ ПОЛЬЗОВАТЕЛЯ



Изменение радио передатчиков

Введите S/N, чтобы изменить или нажать ключ В передатчика. Ввкдите код устройства и подтвердите

отвечая ДА (кнопкой В или кнопкой В на передатчике) передатчик выключается и программа переходит на новый экран. Если передатчик выключен программа предлагает включить его и подтверждением процедура завершается.

Отвечая НЕТ, программа предлагает изменить настройки реле или часовой пояс.

Изменения тега близости

Введите S/N, чтобы изменить и подтвердите кнопкой В.

Если тег включён, программа предлагает выключить его, если тег выключен, программа предлагает включить его.

Следующий экран предлагает изменить часовой пояс.

RU

ERMU Передовой мультипользовательский приёмник

13.5] МЕНЮ КОПИРОВАТЬ ПАМЯТЬ





Fig. 1

Передовой мультипользовательский приёмник

13.6] МЕНЮ КОПИРОВАНИЕ ПАМЯТИ



RU

Передовой мультипользовательский приёмник

13.7] МЕНЮ КОПИРОВАТЬ ПАМЯТЬ: КОПИРОВАТЬ НА ПРИНТЕ

Отправляет на печать содержимое памяти на USB port

С этой опцией возможно отправить содержимое памяти (пользователи или события) на USB port и отобразить его, используя программу по коммуникации. (пр. HyperTerminal) Действуйте как указано ниже:

1) Настройте USB port Ermu на режим PRINTER и выбирите скорость передачи данных [Baud Rate] от 1200 до 115200 Baud (см. Par XXX)

2) Запустите HyperTerminal и настройте параметры серийной коммуникации (Name, Port, Speed в бит/сек)

ЗА) Печать пользовательской памяти



- В этом случае печатается следующая информация:
- пароль
- код устройства
- Часовые пояса
- Польщователь N, Тип, FC,SN, Статус, Реле, TZ, Имя пользователя

Building growth growth growth 1 Image: State of the state	🗞 ermu - HyperTerminal					
ERMU PRSSWORD: 11111 FACILITY CODE: 000,000 USER ADDRESS TIME ZONES: TZ1 = WEEKDAYS=7, 00:00-22:00, 22:10-22:20 TZ2 = TZ4 = TZ5 = TZ6 = TZ7 = TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-W 001 20030 E A=1 B=2 C=3 D=4 0002 RF-U 001 20030 E A=1 B=2 C=3 D=4 End of List	Bodics Youkza Giana Dasfemento L					
ERMU PRSSWORD: 11111 FACILITY CODE: 000,000 USER ADDRESS TIME ZONES: TZ1 = WEEKDAYS=7,00:00-22:00,22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ6 = TZ7 = TZ7 = TZ7 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-W 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21433 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21433 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21030 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21030 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 20030 E A=1 B=2 C=3 D=4 - End of List	06-3048					
PRSSWORD: 11111 FACILITY CODE: 000,000 USER ADDRESS TIME ZONES: TZ1 = WEEKDAYS=7,00:00-22:00,22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ6 = TZ7 = TZ7 = TZ8 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-W 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21433 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	ERMU					
FACILITY CODE: 000,000 USER ADDRESS TIME ZONES: TZ1 = WEEKDAYS=7,00:00-22:00,22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ7 = TZ7 = TZ7 = TZ7 = TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	PASSWORD: 11111					
USER ADDRESS TIME ZONES: IZ1 = WEEKDAYS=7, 00:00-22:00, 22:10-22:20 IZ2 = IZ3 = IZ4 = IZ5 = IZ6 = IZ7 = IZ7 = IZ8 = IZ9 = USER N. TYPE FC S/N STATUS RELAY IZ USER NAME 0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21439 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	FACILITY CODE: 000,000					
TIME ZONES: TZ1 = WEEKDAYS=7, 00:00-22:00, 22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ7 = TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	USER ADDRESS					
TIME ZONES: TZ1 = WEEKDAYS=7, 00:00-22:00, 22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ7 = TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List						
TIME ZONES: TZ1 = WEEKDAVS=7, 00:00-22:00, 22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ7 = TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-N 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List						
TZ1 = WEEKDAYS=7, 00:00-22:00, 22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ7 = TZ7 = TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-N 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	TTHE ZONER.					
TZ2 = TZ3 = TZ4 = TZ5 = TZ6 = TZ7 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-N 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21439 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	IIME ZUNES: IZ1 = WEEKDAYS=7, 00:00	-22:00, 22:	10-22:20			
TZ4 = TZ5 = TZ7 = TZ7 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21439 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	1Z2 = 1Z3 =					
126 = TZ7 = TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	124 = 125 =					
TZ8 = TZ9 = USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-N 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	126 =					
USER N. TYPE FC S/N STATUS RELAY TZ USER NAME 0001 RF-N 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	178 =					
OUSER N. TYPE FC S/N STHTUS RELHY TZ USER NHME 0001 RF-N 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List		etotue	DCI OU			
0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	USER N. TYPE FC S/N	STHTUS	RELHY	12	USER NHME	
00003 RF−U 001 200030 E A=1 B=2 C=3 D=4 - 0004 RF−U 001 30610 E A=1 B=2 C=3 D=4 - End of List	0001 RF-N 002 09127 0002 RF-II 001 21493	E	A=1 B=2 C=3 D=4 A=1 B=2 C=3 D=4	_		
End of List	0003 RF-U 001 20030	Ĕ	A=1 B=2 C=3 D=4	-		
End of List	0004 NF-0 001 30010	E.	H-1 D-2 C-3 D-4	-		
-	End of List					
						2

20

Передовой мультипользовательский приёмник

ЗВ) Печать журнала регистраций

Печать журнала регистраций может быть сделана через меню В (Владелец)



В этом случае все зарегистрированные в памяти приёмника события отправляются на принтер, с пометкой даты/времени/типа события. Также в этом случае полный регистр отправлен на USB порт, используя параметры коммуникации, настроенные до этого в меню COM.

🗞 emu - HyperTerminal 📃 🗖	×
(he Holifice Yourkare Chiene Trademinents)	
D 📽 🗉 3 IO 3 🛱	
	~
17/01/2010 11:36:20 Remote TX database domiloed 17/01/2010 11:36:20 Remote TX database domiloed 17/01/2010 11:36:22 Remote TX database domiloed 17/01/2010 11:36:22 Remote TX database domiloed 17/01/2010 15:57:45 Date/Time Changed 17/01/2010 05:57:45 Date/Time Changed 18/01/2010 05:57:25 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:45:25 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:46 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:47 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:27 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:25 FC002 SX00512 R:1 K:R-C- 18/01/2010 05:46:25 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:25 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:25 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:27 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:27 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:27 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:46:20 FC001 SX20030 R:1 K:R-C- 18/01/2010 05:56:20 FC001 SX200030 R:1 K:R-C- 18/01/2010 05:56:20 FC001 SX200030 R:1 K:R-C- 18/01/	
Connesso a 0.06.43 Riley, aut. 115200-0441 SCORR PARISC NUM Acquibited Econometre	18

Fig. 4



ИНСТРУКЦИЯ ПО УСТАНВОКЕ

ERMU

Передовой мультипользовательский приёмник

13.8] МЕНЮ НАСТРОЙКИ



Передовой мультипользовательский приёмник

13.9] МЕНЮ НАСТРОЙКИ: ПАРАМЕТРЫ



ИНСТРУКЦИЯ ПО УСТАНВОКЕ

ERMU Передовой мультипользовательский приёмник

13.10] ЧАСОВОЙ ПОЯС

Устройство позволяет управлять часовыми поясами. 9+1 часовых поясов и для каждого имеется 9 интервалов времени.

Часовой пояс, которому принадлежит каждый S/N (радиопередатчик или тег wiegand) уточнён в течении первого сохранения пользователя. Часовой пояс отмечен как "-" соответствует постоянному праву входа и не назначает никакой часовой пояс выбранному S/N. Часовой пояс "-" по умолчанию.



ИНСТРУКЦИЯ ПО УСТАНВОКЕ

ERMU

Передовой мультипользовательский приёмник

14] МЕНЮ ВЛАДЕЛЬЦА

доступ к меню OWNER может быть сделан через пароль из меню CONFIG.

Владелец может иметь иной уровень авторизации и выполнить следующие операции

печать на USB файл журнал событий

исправление внутренних часов (дата/время)

изменить персональный пароль входа

Пароль входа по умолчанию для этого меню 11111

Можете зайти в меню владельца нажатием кнопки D на главной панели или нажатием одновременно кнопок A+B master на Master transmittter.



www.erone.com www.cdvigroup.com | 25

RU

ERMU Передовой мультипользовательский приёмник

15] НАСТРОЙКИ МОДЕМА

данное устройство снабжено соответствующими соединениями для использования двух типов модемов: GSM и PSTN. Через два модема возможно подключение к удалённому девайсу, через общественную телефонную линию или через GSM систему.

А) удаленный Ermu, подключённый к общественной телефонной сети



Fig. 5

Передовой мультипользовательский приёмник



Для соединения GSM необходимо подключить GSM модем к правильному соединителю, снабжённым сим машина к машине или голосовым лата сим разрешённым для GSM передач на 960 BAUD. Ermu снабжён соединителем для внешней антенны GSM



Fig. 6



Передовой мультипользовательский приёмник

КАРТА ЛЕД МОДЕМ GSM				
Готов	0	Выключен	Модем выключен	
		Включён	Модем готов	
Звонок	0	Выключен	Модем не использован или идёт соединение	
		Включён	Ожидание ответа	
DCD (опознавание данных)	0	Выключен	Идёт звонок	
		Включён	Карта модем включена	
GSM TX	0	Выключен	Нет связи с провайдером	
		Включён	Активность RF с провайдером	

(001-064) идентичным, установленному на ПК.

15] НАСТРОЙКИ МОДЕМА





PC con modem integrato



PC con modem esterno

telefonica

Linea

телефонная линия)

2А) : ПК с внешним модемом, подключённым к PSTN См 1А

1А) : ПК со встроенным модемом, соединенным к PSTN (общественная

В этом случае используйте внутренний модем ПК, чтобы набрать номер PSTN модема, находящегося в удалённом Ermu. Этот Ermu должен быть настроен на работу в режиме NET (См. меню параметры COM) с BAUD RAUD (38400) и адресом

PC collegato ad un

Ermu di servizio



28



Linea telefonica

ERMU di Servizio

www.erone.com www.cdvigroup.com

ЗА) : ПК подключён сервису Ermu, снабжённому PSTN модемом, соединенным к PSTN (публичная телефонная связь)

В этом случае используйте сервис Ermu, снабжённый PSTN модемом для звонка на удалённый Ermu.

Сервис Ermu настроен на работу в режиме "MODEM" (См меню параметры COM) с BAUD RAUD по умолчанию (38400). На ПК используйте sw: "ERMU SITE MANAEGER"

Ermu удалённого контроля настроен на работу в режиме NET.



ИНСТРУКЦИЯ ПО УСТАНВОКЕ

ERMU Передовой мультипользовательский приёмник



4B) : ПК соединенный через USB к сервису Ermu снабжённому модемом GSM.

Используйте модем сервиса Ermu для звонка на удалённо расположенного Ermu, снабжённого модемом GSM. Сервис Ermu настроен на работу в режиме "MODEM" На ПК используйте sw: "ERMU SITE MANAEGER" Ermu удалённого контроля настроен на работу в режиме NET.

5B) : ПК соединенный через USB к внешнему модему GSM В этом случае используйте внешнюю модель GSM для звонков на удалённо расположенный Ermu через GSM. На ПК используйте sw: "ERMU SITE MANAEGER" Ermu удалённого контроля настроен на работу в режиме NET.

16] ИСПОЛЬЗОВАНИЕ МОДУЛЯ MD-WIFI

Ermu wifi модуль это веб сервер, который использует 2,4 GHz IEEE 802.11 b/g/n c 1X2 SISO, 150MBps max data rate, 21dBm max output power.

Он также имеет один RJ45 соединитель для настраевомого Ethernet LAN port IEEE 802.3 с авто кроссовером, автополярностью и автонегоциацией в Physical Layer.

16.1 Предварительные операции

16.2 Фиксация модуля к материнской панели

Перед установкой модуля WIFI на Ermu не забудьте отключить электричество, батарею в 12 В, и все провода. Разместите панель в соединитель на верхней правой стороне Ermu зафиксируйте WIFI модуль. Установите внешнюю антенну 2,4 GHz, если имеется в наличии

16.3 Разрешить WIFI модуль.

На контроле Ermu зайдите в меню настроек, чтобы включить WIFI модуль выбрав параметр "RS232 Mode" и измените его со значения по умолчанию MODEM на значение LAN

Menu Config -> COM Parameters -> RS232 Mode -> LAN

16.4 Вход через LAN

Подключите провод Ethernet напрямую: модуль обладает собственным сервисом DHP с адресом: **192.168.1.1**.





RU

ERMU Передовой мультипользовательский приёмник



16.5 Вход WIFI







это WIFI точка доступа генерирующая сеть WIFI Каждый Ermu WIFI модуль обладает собственным SSID определённым на фабрике Например: **ERMU-00:0A:01**

Пароль сети по умолчанию: <adminadmin>

имя сети и пароль могут быть изменены позже в главном меню "Главное меню-настройки-сеть" SSID и ключ.

Сейчас вы можете ввести в браузере IP адрес модуля Wifi: http://192.168.1.1/login.html.

Все инструкции для навигации на веб странице генерированная веб сервером имеется в следующей инструкции: Ermu веб сервис

16.6 Доступ к интернету



Передовой мультипользовательский приёмник

17] ПРИМЕЧАНИЯ

17.1 ВНУТРЕННИЕ ЧАСЫ

внутренние часы на литиевой батарее CR2032. Часы всегда обновлены по времени и дате батарей но не переходят самостоятельно на легальное время, жат процедура должна быть выполнена вручную. Замена батарей должна быть: заменять на такую же или эквивалентную и соблюдая полярность: поле плюс направлено вверх

17.2 БЕК АП БАТАРЕИ

Соединение к к факультативной бек ап батарее должно быть сделано черезспециальный провод, соблюдая полярность Провод снабжён:

КРАСНЫЙ = ПОЗИТИВНЫЙ,

ЧЁРНЫЙ = НЕГАТИВНЫЙ.

Провод батареи снабжён предохранителем типа T3.15A - 250V и соединителем

17.3 ВОССТАНОВЛЕНИЕ ФАБРИЧНЫХНАСТРОЕК

Является возможным вернуть устройство к фабричным настройкам (включая пароль) следуя процедуре:

Включите устройство нажатием одновременно кнопок C+D

эта процедура переустанавоивает пароль на настройки по умолчанию, режим работы реле, USB порт 485 сетей, настройки модема. Память базы данных (пользователи и журнал) не удаляется. Если хотите изменить память, которая разделяет зоны пользователей от зон событий, нажмите одновременно кнопки B+D.

18] ГАРАНТИЯ

Гарантия продукта 24 месяца начиная с дня изготовления. Если присутствует неполадность в работе устройство он будет исправлен или заменён производителем.



Costruito da :

CDVI WIRELESS S.p.A. Via Piave, 23 31020 S. Pietro di Feletto (TV) - ITALIA Tel. +39.0438.450.860 Fax +39.0438.455628 E-mail: info@erone.com Web: www.erone.com





Thank you for buying our products and for the confidence placed for our company

You are recommended to read carefully this manual before proceeding with the installation.

i] WARNINGS

This manual is intended for professional competent personnel adequately trained.

Installation and connections must be realized in accordance with Good Working methods and in compliance with the current Regulations. Bad installing could be sourse of hazard.

Before the receiver is connected, make sure that the plate details corresponds to those of the power mains and that there is a differential circuit-breaker and an adeguate protection against overcurrents on the supply side of the system. Fit an omnipolar disconnection switch with contact opening gap of at least of 3 mm.

The appliance must be installed in a place with limited access (entrance allowed only to trained personnel)

ii] RECOMMENDATIONS

For an installation complying to the safety standars it is mandatory to verify the following points:

A. The connection of the appliance to the magnetothermic braker must be done with cable equippped with earth wire.

B. The earth wire must be connected to the terminal block fixed to the metallic enclosure, according to the wiring diagram on fig. XX . This diagram secures a Protection Earth wiring (PE) . The connection of the metallic box cover to the earth protection must

be realized with a faston equipped wire (see connection diagram and locate the fixing point on the cover).

C. The connection of the bottom of the metallic box to the Protection Earth is realized directly by the terminal block. D. The system must be installed on an electric installation conform with the Regulations in force which must include a circuit break

device. E. Before the setting up check the electrical connection to the Earth of all the enclosure parts.

F. The cable coming from the circuit braker must be firmly fixed.

More details to respect

A. During a regular working of the ERMU appliance, the box must be closed and locked with the proper key, to avoid any contact with parts under voltage.

- B. For all the maintenance operations and setting up the system must be disconnected before to open the cover.
- C. The contact with parts subject to the Mains is interdicted : this danger zone is indicated by the sticker here below.
- D. In case of the installation of a battery, respect the recommended specifications : 12 V / 7Ah
- E. Respect the polarity of the cable when connecting the battery.

Certification

This product is certified according to the European Directive: - 2014/53/UE : «RED» Directive, if and only if the instruction provided by the manufacturer are followed. Possible differences from the manual can bring to serious safety or functionin





Advanced Multiuser Receiver

ii] SUMMARY

1] - INTRODUCTION	33
2] - TYPES	34
3] - SYSTEM ACCESSORIES	35
4] - TECHNICAL SPECIFICATIONS	33
5] - MOUNTING KIT	37
6] - MAIN FEATURES	38
7] - MOUNTING INSTRUCTIONS	38
8] - WIRINGS	39
9] - LAYOUT	10
10]- CONNECTION LEGEND	1
11]- PUSH BUTTONS & DISPLAY	12
12]- MAIN MENU	13
13]- CONFIG MENU	4
13.1] - INFO	15
13.2] - ADD (TRANSMITTERS / TAG) 4	6
13.3] - DELETE (TRANSMITTERS / TAG / MEMORY) 4	6
13.4] - MODIFY USER (TRANSMITTERS / TAG) 4	17
13.5] - COPY MEMORY (BACKUP / RESTORE) 4	8
13.6] - COPY ON PRINTER	50
13.7] - CONFIG	52
13.8] - COM PARAMETERS	53
13.9] - TIME ZONES	54
14] - OWNER	55
15] - MODEM SETTINGS	6
16] - LAN / WIFI 5	;9
17] - NOTES	5 1
18] - GUARANTEE	5 1

1] INTRODUCTION

ERMU is a innovative multiuser receiver with double technology ID (RF & wiegand). It's suited to manage premises with common entries as parkings, garages, condominiums, basins making use of a remote control or a passive tag card. Remote management of the data base by using a GSM or PSTN modem card (optional).

2] TYPES

P/N	Luxor Code	Description
SEL2641R433-EP100	F0114000008	ERMU 433 MHz 16-24 Vac/dc Plastic box
SEL2641R433-EP101	F0114000009	ERMU 433 MHz 16-24 Vac/dc Plastic box + MODEM PSTN
SEL2641R433-EP102	F0114000010	ERMU 433 MHz 16-24 Vac/dc Plastic box + MODEM GSM
SEL2641R433-EP103	F0114000013	ERMU 433 MHz 16-24 Vac/dc Plastic box + Module WIFI
SEL2641R433-EM100	F0114000001	ERMU 433 MHz 16-24 Vac/dc Metal Box
SEL2641R433-EM10G	F0114000002	ERMU 433 MHz 16-24 Vac/dc Metal Box + MODEM GSM
SEL2641R433-EM10P	F0114000003	ERMU 433 MHz 16-24 Vac/dc Metal Box + MODEM PSTN
SEL2641R433-EM200	F0114000004	ERMU 433 MHz 230V Metal Box
SEL2641R433-EM20G	F0114000005	ERMU 433 MHz 230V Metal Box- MODEM GSM
SEL2641R433-EM20P	F0114000011	ERMU 433 MHz 230V Metal Box- MODEM PSTN
SEL2641R433-EM210	F0114000012	ERMU 433 MHz 230V Metal Box + BAT 7Ah
SEL2641R433-EM21P	F0114000006	ERMU 433 MHz 230V Metal Box + MODEM PSTN + BAT 7Ah
SEL2641R433-EM21G	F0114000007	ERMU 433 MHz 230V Metal Box + MODEM GSM + BAT 7Ah

NOTE:

I types SEL2641R433-EPx with plastic box and SEL2641R433-EM10x with metal box, must be powered by a 40VA transformer, with primary 230 Vac-50 Hz and secondary 16 Vac double insulation or by a power source from 16 to 24 Vac/dc .

The transformer must be type LPS (Limited power source).

INSTALLATION MANUAL

ERMU Advanced Multiuser Receiver

			3333
TX MASTER	TX USER- 024A	TX USER - ER	TX USER - MINI
ANTENNA GSM	MODEM PSTN	BACKUP MEMORY OLD-STYLE	USB DEVICE CABLE
Ò			
PROG. TX CABLE	12V 7Ah ACCUMULATOR	ANTENNA 433 MHz	MODEM GSM
Module Wifi			

P/N	Louxor P/N	Description
S2TR2641E2M	F0204000032	TX MASTER
S2TR2641E2	F0204000017	ТХ 024А 2СН
S2TR2641E4	F0204000018	ТХ 024А 4СН
S7TR2641E4	F0104000030-A	TX ER 4CH
SETR2641AM1B	F0103000067	TX MINI 2 CH BLU
SEAGSM	F1014000007	ANTENNA GSM
MD-PTN	F1014000009	MODEM PTN
SEL-2641MEMB	F0204000034	BACKUP MEMORY OLD-STYLE
AC-CUSA/B	F1014000011	USB DEVICE CABLE
SEL2641-CPT02	F1014000012	PROG. TX CABLE
SEA433	F0103000029	ANTENNA 433 MHz
MD-GSM	F1014000008	MODEM GSM
MD-WIFI	tbd	MODULE WIFI/LAN
CE-35ACCBT12V7A		12V 7Ah ACCUMULATOR
CAETHRA	F0111000014	CONVERTER RS232-TCP/IP

4] TECHNICAL SPECIFICATIONS

- Radio receiver 433,92 MHz in AM/ASK;
- Keeloq® Hopping code security system;
- 2 inputs for 26, 30, 44 bit-wiegand readers with automatic detection;
- 4x24VA output relays (mac 60Vdc 42,4 Vac) : 2 outputs (C-NO) + 2 outputs (C-NO-NC);
- 2 inputs for exit-buttons (C-NA);
- Input USB Device for PC connection;
- Slot for GSM modem card [9600 Baud] with external antenna or PSTN modem card w/RJ45 connector ;
- I/F RS-485 for network connection;
- Up to 64 devices in multidrop;
- Log Events / Users memory;
- Max Users : 4158 (with 300 events);
- Max Events : 5455 (with 100 users);
- Input for transmitters re-programming probe w/RJ11 connector;
- Connector for memory expansion [6 x 512 K];
- Connector for old-style backup memory;
- Connector for backup memory [4 x 512 K];
- Connector for firmware update special card;
- Real Time Clock with lithium backup battery CR2032;
- Power supply 230 Vac / 16-24 Vac/dc;
- Input 12 Vdc for 12V / 7Ah backup battery with embedded battery charger.
- Auxiliary output 5 Vdc 150 mA

5] MOUNTING KIT

	A			Community
	Lock with key	Fuse T3,15A 250V	Fuse T1A 250V	Screws + plugs
ERMU	1	1	1	4

6] MAIN FEATURES

- Operating mode Stand-alone / Network / modem;
- User data base management [memo, delete, multiple memorization, enable / disable]
- Detailed user information data-base;
- Relay operating mode [momentary, step, delayed]
- Time zone management [10]
- Event log file
- Antipassback [for wiegand inputs only]
- Detailed setting for multidrop 485 network
- Detailed settings for modem GSM / modem PSTN calls
- Site password
- PC connection password
- 2 security levels [configurator, user manager]
- Site management software for Windows [XP, Vista, Windows 7]
- User management in stand-alone with local keyboard or with Master transmitter

7] MOUNTING INSTRUCTIONS



Install the elements of the lockto complete the mounting of the ERMU metallic enclosure. Fix the box vertically using the holes available on the bottom.



For the installation of the backup battery (Ref. pag. 4) place the battery vertically and leaned on the right side of the box.

Then insert the faston on the battery contacts making attention to respect the right polarity and connect them to the main board at the terminal block 10 (See pag. 9).

8] WIRINGS



INSTALLATION MANUAL

ERMU

Advanced Multiuser Receiver

9] LAYOUT



- 1 Backup memory connector
- 2 Input for 433 MHz antenna
- 3 RF receiver card
- 4 PSTN module (optional)
- 5 CR2032-3V backup battery
- 6 RJ45 connector for telephone line
- 7 Input power supply from 16 to 24 Vac/dc
- 8 4 push-buttons (A,B,C,D)
- 9 Relay activation led
- 10 Input for 12V backup battery
- 11 Output C-NO-NC relay RL4
- 12 Output C-NO-NC relay RL3
- 13 Output C-NO-NC relay RL2

- 14 Output C-NO-NC relay RL1
- 15 Input NO-C-NO for exit-buttons PB1, PB2

EN

- 16 Buzzer
- 17 Input Wiegand reader-1
- 18 Input Wiegand reader-2
- 19 I/F RS-485
- 20 Jumper for 485 termination --> 10.2
- 21 Backup memory connector (old type)
- 22 RJ11 connector for TX programming probe
- 23 USB Signalling led
- 24 USB Device connector
- 25 Power led
- 26 Auxiliary output 5Vdc 150 mA

www.erone.com www.cdvigroup.com

40

Advanced Multiuser Receiver

10] ELECTRONIC CARD CONNECTIONS



10.1] CONNECTION TO MAINS - 230Vac

For types SEL2641R433-EM2x only



10.2] RS-485 LINE TERMINATION

In a RS-485 network set the termination jumper CLOSED in the ERMU at the end of the line and OPEN in the ERMU intermediate.





ERMU END OF LINE: JUMPER CLOSED ERMU INTERMEDIATE: JUMPER OPEN

www.erone.com www.cdvigroup.com | 41 **INSTALLATION MANUAL**

ERMU

Advanced Multiuser Receiver

11a] PUSH BUTTON & LCD DISPLAY



A = Scroll menu B = Confirm

C = Change visualization (H, F, D)

(Facility+decimal / Hex / Facility+S/N,)

D = A + B = Enter into main Menu / exit from option

The push buttons A and B have the same function of the Master Transmitter keys

2 different acces levels to the menu :

A = CONFIG MENU B = OWNER MENU

with 2 different passwords.

The default password is 11111 for both levels.

The **Configuration password** is used to access to the installation, parameters setting and maintenance options.

The **Owner password** enable the access to the event memory and more options (date / time setting). Pushing A+B simultaneously displays the type of menu choice and then the corresponding password request. Access to the main menu with a MASTER transmitter type S2TR2641E2M, by pushing simultaneously the keys A + B, or pushing the buttons A + B of the main board or simply using the button D.

Scroll the menu options using the key A (LEFT) of the Master transmitter or the button A of the board.

Make the choice using the key B (RIGHT) of the transmitter of the button B of the board.

Return to the upper menu by pushing simultaneously A+B or the button D of the board.

The key A can be used to increment the digits when setting a number (a password for instance) or to scroll the options of a parameter.

The key B is used to confirm the choice and shift to the next number / parameter.

11b] GETTING STARTED

Ay the first power-up the receiver allows to set-up the memory structure, divided into User zone and Events zone. The partition by default is : 3956 Users and 556 Events.

USERS 03956 XXXXX EVENTS 00556

By changing the number of the users, the system calculates automatically the number of events allowed.



11c] VISUALIZATION : Symbols

Press several times the button C to change the visualization of the Serial Number (SN) and the Facility Code (FC) for the remote control and the serial number for the Tag wiegand.

Symbol	RF TRANSMITTER	TAG WIEGAND
-	SN=10406 FC=001	WG2 = 10750328
h	SN=000128A6	WG2 = 00A4096E
f	SN=001 10406	WG2 = 164 02414
d	SN=00075942	WG2 = 10750318

11d] CLOCK SET-UP: Enter in the menu Owner.

ERMU	HH:MM:SS
D	D/MM/YYYY

NOTE: It's necessary to change manually or through the PC the internal clock when there is the change WINTER TIME / SUMMER TIME

11e] MEMO TX MASTER

You can access to the main menu only using a Master Transmitter already memorized. If it isn't the case, push simultaneously the keys A+B of the Master transmitter. The display shows the following message: $\Delta + B$



Press the key B to confirm.

12] MENU

Pushing the button D of the board (or even simultaneously the keys A+B of a Master transmitter memorized) you can access to the main menu:



13] CONFIG MENU

Selecting the option A of the opening menu you are requested to enter the password. Enter the password making use of the keys A and B of the board or of the transmitter Master. The key A increases the digits , the key B shifts the cursor left.



13.1] MENU INFO

Example:

Free Memory 3950 User Stored 0002 In this example are available 390 memory locations and have been memorized 2 users.

EN

13.2] MENU ADD



Memorization of a radio transmitter

Type in the transmitter S/N making use of the buttons A and B of the board or activate the right key (B) of tha transmitter : it's own S/N will be displayed automatically. Confirm with the button B or the key B of the transmitter. Then you are required to enter the Facility code. Type in the 3 digits and confirm.

Assign the time-zone desired (0..9) and select the relay associated to each transmitter key.

The Time zone «-», proposed as default, doesn't assign any time zone and gives permanent access. By default is proposed to assign the relay K1 to key A, relay K2 to key B, relay K3 to key C and relay K4 to key D.

The symbol «-» doesn't assign any relay to the transmitter key.

Multiple transmitter memorization

Answering NO with the button A to the question «STORE SINGLE ?» you can proceed with multiple memorization. You are requested to enter the number of units to memorize.

At the end N transmitters are memorized, with starting S/N as the one typed.

Then you come back to the menu Add.

Tag wiegand memorization

Type in the serial number of the tag, making use of the buttons A and B or approach the tag to the reader : its own S/N is shown by the display. Then confirm with the button B.

On the next screen specify the Time-zone and confirm. Then you come back to the menu Add.

13.3] MENU DELETE



13.4] MENU MODIFY USER



Change of a radio transmitter

Insert the S/N to change or push the key B of tha transmitter.

Type in even the facility code and confirm

By answering YES (with the button B or the key B of the transmitter, the transmitter is disabled and the program skips to the next screen.

If the transmitter is disabled the program suggest to enable it and with a confirmation the operation is accomplished.

By answering NO the program suggests to change the relay settings or the time zone.

Change of a proximity tag

Insert the S/N to change and cofirm with the button B.

If the tag is enabled, the program suggest to disable it, if the tag is disabled, the program suggests to enable it.

The next screen invites to change the time zone.

13.5] MENU COPY MEMORY





Fig. 1

EN

13.6] MENU COPY MEMORY (follows)



13.7] MENU COPY MEMORY : COPY ON PRINTER

Sends to print the memory content on the USB port

With this option it is possible to send the memory content (users or event log) to the USB port and display them by using a communication software (as. HyperTerminal). Proceed as follows:

1) Set the USB port of Ermu in mode PRINTER and select the communication speed [Baud-Rate] from 1200 to 115200 Baud (See. Par. XXX).

2) Launch the HyperTerminal and set the serial communication parameters (Name, Port, Speed in bit/sec, and so on).

3A) Print of the User memory.



In this case the following information are printed:

- Password
- Facility codes (2 types)
- Time zones (week days, subzones)
- User N, Type, FC, SN, Status, Relay, TZ, User name.

a ermu - HyperTerminal	
🚈 Bogues Annya Distantato 1	
ጋው © \$ © B සි	
ERMU PRSSWORD: 11111 FACILITY CODE: 000,000 USER ADDRESS	1
TIME ZONES: TZ1 = WEEKDAVS=7, 00:00-22:00, 22:10-22:20 TZ2 = TZ3 = TZ4 = TZ5 = TZ5 = TZ6 = TZ7 = TZ7 = TZ7 = TZ8 = TZ9 =	
USER N. TYPE FC S/N STATUS RELAY TZ USER NAME	
0001 RF-M 002 09127 E A=1 B=2 C=3 D=4 - 0002 RF-U 001 21493 E A=1 B=2 C=3 D=4 - 0003 RF-U 001 20030 E A=1 B=2 C=3 D=4 - 0004 RF-U 001 30610 E A=1 B=2 C=3 D=4 - End of List	
	, e

50

Fig. 3

3B) Print of the event log

The print of the event log can be done from the menu B (Owner)



In this case are are sent to print all the events registrered on the event memory of the receiver marked with date / time, type of the event. Also in this case the complete log file is sent to the USB port using the communication parameters previously set in the menu COM.

🗞 annu HyperTerminal 📃	
()e Hydrife Ywellans Definition 1	
C # 3 C B #	
	10
17/01/2010 11:36:20 Remote TX database download 17/01/2010 11:36:20 Remote TX database download 17/01/2010 11:36:21 Remote TX database download 17/01/2010 11:36:21 Remote TX database download 17/01/2010 11:36:21 Remote TX database upload 17/01/2010 15:37:45 Date/Time changed 18/01/2010 95:44:51 Date/Time changed 18/01/2010 95:45:25 FC001 SN20030 R:1 K:A-C- 18/01/2010 95:45:25 FC001 SN20030 R:1 K:A-C- 18/01/2010 95:45:36 FC001 SN20030 R:1 K:A-C- 18/01/2010 95:45:36 FC001 SN20030 R:1 K:A-C- 18/01/2010 95:45:46 FC001 SN20030 R:1 K:A-C- 18/01/2010 95:45:47 FC001 SN20030 R:1 K:A-C- 18/01/2010 95:46:25 FC002 SN09127 R:1 K:A-C- 18/01/2010 95:46:55 FC002 SN09127 R:1 K:A-C- 18/01/2010 95:46:56 PB1 R:4 18/01/2010 95:46:56 FD01 SN20030 R:1 K:A-C- 18/01/2010 95:46:52 F002 SN09127 R:1 K:A-C- 18/01/2010 95:46:52 PB1 R:4 18/01/2010 95:46:52 FC002 SN09127 R:1 K:A-C- 18/01/2010 95:46:52 PB1 R:4 18/01/2010 95:46:52 F000 SN20030 R:1 K:A-C- 18/01/2010 95:46:52 PB1 R:4 18/01/2010 95:46:52 FC000 SN20030 R:1 K:A-C- 18/01/2010 95:46:52 FC000 SN20030 R:1 K:A-C- 18/01/2010 95:46:52 PB1 R:4 18/01/2010 95:46:52 FC000 SN20030 R:1 K:A-C- 18/01/2010 95:46:74 FC000 SN20030 R:1 K:A-C- 18/01/2010 95:52:68 Remote configuration changed 18/0	
Connesso a 0.06.43 Riev. aut. 115200-0441 SCORR MADUSC NUM Acquibited Econtemporte	đ

Fig. 4

INSTALLATION MANUAL

ERMU Advanced Multiuser Receiver

13.8] MENU CONFIG



- In = W2 / OUT = W1 : In this case is set an Antipassback for the user who activates any relay through the reader Wiegand 2. The tag, once read by reader Wiegand 2 cannot be accepted anymore by Wiegand 2 but only by Wiegand 1.

- W1 + W2 : proximity tags from the readers Wiegand 1 and Wiegand 2;

Only the radio transmitters and the tag with the Facility Code identical to

Radio transmitters or tags having Facility code different from the one cho-

www.erone.com

52 www.cdvigroup.com



13.9] MENU CONFIG : COM PARAMETERS



13.10] TIME ZONES

The device allows to manage the permission time zones. 9+1 time zone are available and for each of them are available 9 interval times.

The time zone to which belongs each S/N (radio transmitter or tag wiegand) is specified during the first memorization of the user. The time zone marked as «-» corresponds to the permanent right to enter and doesn't assign any time zone to the selected S/N. The Time zone «-» is the default value.



14] OWNER MENU

The menu OWNER can be accessed with a password different from the menu CONFIG.

The Owner, in this way, can have a different authorization level and execute the following operations :

- Print to USB the event log file
- Adjustment of the internal clock [date / time]
- Change of the personal entry password.
- The default entry password for for this menu is 11111.

You can access to the Owner menu pushing the button D of the main board or pushing simultaneously the keys A+B of a Master transmitter.



15] MODEM SETTINGS

This appliance is euipped with the proper connectors for the usage of 2 types of modems : GSM e PSTN. Through the 2 modems it is possible the connection to a remote device, both through the public switched telephone network and through the GSM system Connection examples:

A) Remote Ermu connected to public switched telephone network



Fia. 5

56







For a GSM connection it is necessary to plugin on the proper connector the GSM modem, equipped with a SIM Machine-to-Machine or a voice-data SIM enabled for GSM transmission at 960 BAUD.

Ermu is equipped with the connector for an external GSM antenna.





LEGEND MODEM GSM LEDs			
READY	0	OFF	Modem OFF
		Stable ON	Modem ready
RING	0	OFF	Modem stand-by or Communication in progress
		Stable ON	Waiting for answer
DCD (Data Carrier Detect	0	OFF	Call in progress
		Stable ON	Modem card powered
GSM TX	0	OFF	No communication with the provider
		Stable ON	RF Activity towards the provider in progress

15] MODEM SETTINGS - Follows

Telephone



PC with embedded modem



PC with external modem 1A) : PC with embedded modem connected to PSTN (Public switched telephone network) In this case use the internal PC modem to call the number of the PSTN modem inserted on the remote Ermu. This Ermu must be set to operate in mode NET (See. Menu COM parameters), with the default BAUD RATE (38400) and the address (001 - 064) identical to the one set on the PC. Use on the PC the sw : «ERMU SITE MANAGER».

> 2A) : PC with external modem connected to PSTN See. 1A

Telephone network

Telephone

network



PC connected with Service Ermu



3A) : PC connected to a Service Ermu equipped with a PSTN modem connected to PSTN (Public switched telephone network)

In this case use a Service Ermu equipped with a PSTN modem to call the Remoite Ermu.

The Service ERMU is set to operate in mode «MODEM» (see. Menu COM parameters), with the default BAUD RATE (38400). On the PC use the sw : «ERMU SITE MANAGER». The Remote Ermu is set to operate in mode NET.



4B) : PC connected by USB to a Service ERMU equipped with a GSM modem

Use the modem of the Service Emu to call the remote Ermu, euipped with a GSM modem.

The Service ERMU is set to operate in mode «MODEM» On the PC use the sw : «ERMU SITE MANAGER». The Remote Ermu is set to operate in mode NET.

5B) : PC connected by USB to an external GSM modem

In this case use the external GSM model to call the Remote ERMU through GSM .

On the PC use the sw : «ERMU SITE MANAGER».

The Remote Ermu is set to operate in mode NET.

16] USE of MODULE MD-WIFI

Ermu WiFi Module is Web Server which uses the 2,4GHz IEEE 802.11 b/g/n, with 1x1 SISO, 150MBps max data rate, 21dBm max. output power.

It has also one RJ45 connector for a configurable Ethernet LAN port IEEE 802.3 with auto crossover, auto polarity and auto-negotiation in the Physical Layer.

16.1 Preliminary operations

16.2 Fixing the module to the mother board.

Before installing the WiFi Module into the ERMU, remember to remove the power supply, 12 Volt battery , an all the cables. Place the board into the connector at the top right side of the Ermu controller Fix the WiFi Module with the screw. Install the external antenna 2.4 GHz if available. Replace the connections, and power supply.

16.3 Enable the WiFi Module

On ERMU Controller , enter into the configuration Menu to enable the WiFi Module by selecting the "RS232 Mode" parameter , and change it from the default value "MODEM" to "LAN" value,

Menu Config - COM Parameters - RS232 Mode - LAN

and EXIT from Menu.

16.4 Access through LAN

Connect the Ethernet cable directly : the module has a its own server DHCP with address : 192.168.1.1







16.5 Access Wifi





The ERMU WiFi Module, at default, is an WIFI Access Point generating a wifi network. Every ERMU WiFi Module has it own factory defined SSID.

For example SSID :ERMU-00:0A:01

On your wifi device (Laptop PC, or Tablet, or Smartphone) enter into the SETTINGS Menu , select the WiFi Network search function.

Select the network generated by your ERMU, and type the password when requested.

The network password is factory defined : <adminadmin>

Network Name and Password could be modified later in the "Main Menu – Settings – Networking" SSID and Key.

Now you can type on your browser : http://192.168.1.1/login.html

or any valid address from your browser to access the web pages generated by the web server inside the WiFi ERMU Module.

All the instruction for navigating on the web pages generated by the webserver are available in the corresponding manual : ERMU WEB SERVER.

16.6 Internet access



17] NOTE

17.1 INTERNAL CLOCK

The internal clock is powered by a CR2032 lithium battery. The clock is kept always updated on the time and date by the battery but doesn't change automatically for the legal time. The adjustment solar/legal time must be effected manually. The battery remplacement must be made with an equivalent type and respecting the polarity: **Battery positive contact upwards.**

17.2 BACKUP BATTERY

The connection to a optional backup battery must be effected using the proper cable, respecting the polarity : **RED = POSITIVE, BLACK = NEGA-TIVE**.

The battery cable is equipped with a fuse type T3.15A - 250V.

17.3 FACTORY SETTING RESTORE

It is possible to restore the factory settings (included the Config and Owner password) through the following procedure:

«Give power to the appliance keeping pressed simulteneously the buttons : C+D».

This procedure reset the password to the default value, reset the operation mode of the relays, of the USB port, of the 485 network, the modem settings. The memory date-base (users and event log) is not deleted.

If you want to change the memory partition for users and events, give power keeping pressed simultaneously *B*+*D*

18] GUARANTEE

The Guarantee period for this product is 24 months beginning from the manufacturer date. During this period if the product doesn't work correctly, due to a defective component, the product will be repaired or substituted at the discretion of the producer. After-sale service is supplied at the producer's factory



Manufactured by : CDVI WIRELESS S.p.A. - CDVI Group

Via Piave, 23 31020 S. Pietro di Feletto (TV) - ITALY Tel. +39.0438.450.860 Fax +39.0438.455628 E-mail: info@erone.com Web: www.erone.com



Fig. 8

NOTES

EN

NOTES

Reference : G0301ML0375V07 Extranet : EXE-CDVI_IM ERMU CMYK A5 ML 07

Creator of electronic access solutions

CDVI (Headquarters/Siège social) FRANCE Phone: +33 (0)1 48 91 01 02 Fax: +33 (0)1 48 91 2<u>1 21</u>

CDVI AMERICAS Phone: +1 (450) 682 7945 Fax: +1 (450) 682 9590

CDVI BENELUX Phone: +32 (0) 56 73 93 00 Fax: +32 (0) 56 73 93 05 **CDVI** SWITZERLAND Phone: +41 (0)21 882 18 41 Fax: +41 (0)21 882 18 42

CDVI Group

FRANCE (Headquarter/Siège social) Phone: +33 (0)1 48 91 01 02 Fax: +33 (0)1 48 91 21 21

CDVI CHINA Phone: +86 (0)10 87664065 Fax: +86 (0)10 8766<u>4165</u>

CDVI IBÉRICA Phone: +34 936 916 551 Fax: +34 935 801 278 **CDVI** ITALIA Phone: +39 0331 97 38 08 Fax: +39 0331 97 39 70

CDVI MAROC Phone: +212 (0)22 48 09 40 Fax: +212 (0)22 48 34 69

CDVI SWEDEN Phone: +46 (0)31 760 19 30 Fax: +46 (0)31 748 09 30 CDVI

Phone: +44 (0)1628 531300 Fax: +44 (0)1628 531003

CDVI WIRELESS SPA ITALY Phone: +39 0438 450860 Fax: +39 0438 455628



IS-ERMUML rev. 7 on 24/09/2018)

erone.com cdvigroup.com